


Installation Instructions

For the Inside Screen Door Handle

- 1. The clamp nut has a left hand thread**
2. Verify the screen door latch to the solid door and the door frame are operating properly. Adjust if required before the inside screen door handle is installed. Some latch adjustments effect the factory handle position and the screen door handle may be located in the wrong position if the factory handle is readjusted.

3. Locate the installation template in the kit. With the screen door slider in the closed position, the solid door locked open and the screen door latched shut, stand on the outside steps of the camper and hold the template as shown . Fold the template on the line and hold at a 90 degree angle. Lightly rest the edge of the template on the wide part of the handle. Rotate the template so it is square with the door and mark the diamond shape on the slider panel.

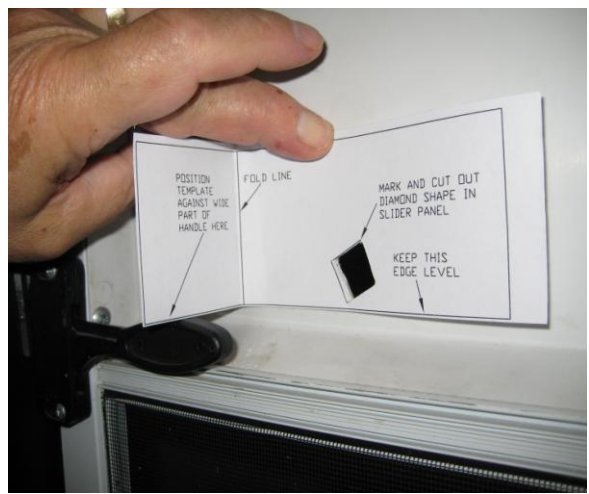

4. Cut out the diamond on the slider. Use a large drill bit up to 5/8 diameter and cut out the corners with a sharp knife. Alternately you can use a rotary tool (Dremel) with a cutting bit.
5. Install one thick square hole washers on the threaded sleeve. Insert the handle assembly into the square hole from the inside of the trailer. Add the remaining square hole washer and the plastic nut. Snugly tighten the nut. While tightening make sure the square washers seat on the square stud.
6. Verify that the installed screen door handle does not contact the factory screen door handle when the screen door is latched closed.
7. Assure there is clearance between the solid door and the outside lever of the kit. Check the engagement of the outside lever and the factory lever. The arm is made of thin wall tubing and can be bent if required. Use two wrenches on the tubing body, not the plastic parts.
8. This completes the installation.



Outside and inside views of completed installation. Ignore the second hole in the panel. That was from a previous installation.

Operation:

1. With the solid door latched to the screen door operate the doors normally.
2. With the solid door latched open, close the slider and use the inside screen door handle to open the screen door when exiting the RV. From the outside you can actuate the latch from the kit handle or the factory handle.

When entering the RV, open the screen door using the original handle.

If you are happy with this handle, tell your friends. I have included extra flyers for your use. If you are not satisfied, please contact me and I will make it right.

Bill Steele

308-870-4188.